

Toll Free 800- 964-7070

Fax 248-623-4911

5492 Dixie Hwy.

Waterford, MI 48329

How to fill your oil:

- 1. Switch the breaker in the generator to off. Marked 30-100 on it. Located on the side of the generator or inside depending on the model.
- 2. Switch the generator Auto/Off/Manual switch to Off. This is located inside the generator on the control panel.
- 3. If the generator was running let it site for about a minute before you check the oil.
- 4. Pull the dip stick out and see where the oil is on it. It should be towards the upper line located at the bottom of the stick.
- 5. If it is towards the bottom you will need to add about a quart. Add it slowly, put about half in and see where it is on the stick. **Very important** not to overfill!
- 6. Fill the oil through the oil fill cap.
- 7. Once you have filled it to the upper mark you are fine. A generator typically never needs more than a quart.
- 8. Once it is full, switch the Auto/Off/Manual switch back to Auto.
- 9. If the generator was running when you shut it down, wait about 30 seconds before you switch the breaker back on. This will give the generator a second to warm up while running, before it takes the load from the house power.
- 10. You are all done.